



1 Feed tail of strap over bar and back through slot.

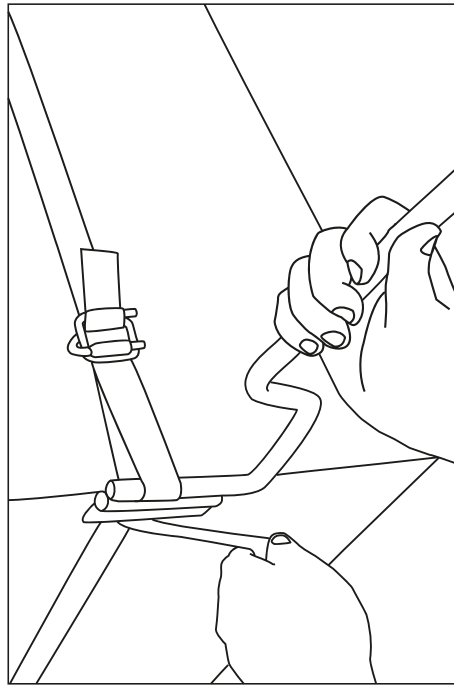

2 Brace tool against edge of load, remove slack and pull tail upward.

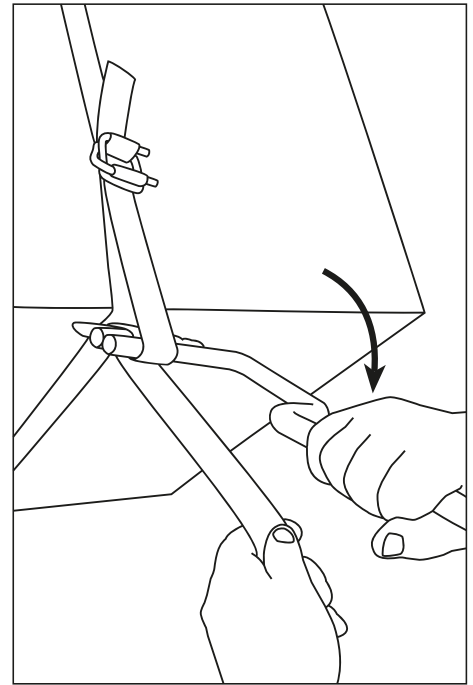

3 Keep tail horizontal to load strap and pull handle to apply tension. Advance tail through slot and repeat step 3 until buckle is closed.

**REDBACK®**  
LOAD RESTRAINT SYSTEMS



T: 425.455.9200 1.866.455.1345 F: 425.455.1750  
[www.REDBACK.com](http://www.REDBACK.com)

Copyright ©2017 All Rights Reserved  
Redback Industries, LLC